

FITTING INSTRUCTIONS

Fitting retaining handle to a CC0240 DuraFlex® lid for 240 litre bins



REQUIRED ITEMS:

Included in the kit are:

- 2 x tube bungs
- 1 x rubber tube (140mm long)
- 1 x 16mm diameter spacer (25mm long)
- 1 x black nylon handle

Other items to enable fitting:

- Pair of pliers
- Glass of water

Ensure good working practices are used at all times and gloves & eye protection worn when required.

Time needed is only a few minutes.

DISCLAIMER:

Container Components Europe Limited cannot be held responsible if our recommended method of fitting is not adhered to.

Fig 1



Fig. 1)

Pick up a tube bung with the pliers and dip into the glass of water.

Fig. 2 & 3)

Then immediately insert bung into the length of rubber tube.

→ The bung should be fully inside the rubber tube as shown below in fig. 4.

Fig 2

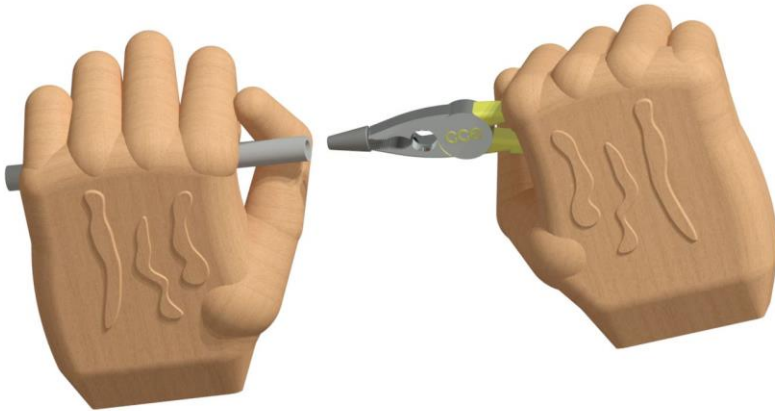


Fig 3

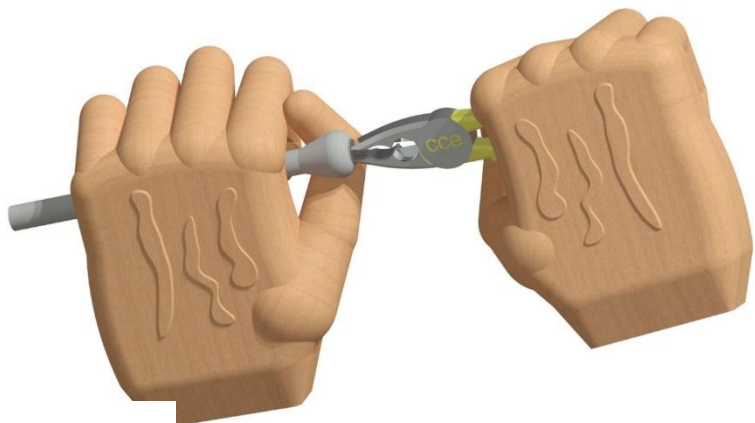


Fig 4



Fig 5

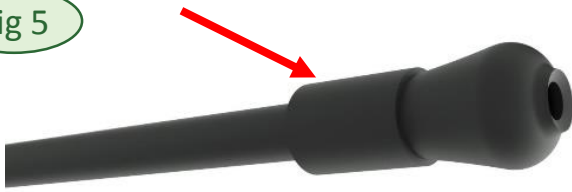


Fig. 5)

Slide the spacer onto the rubber tube until it reaches the inserted bung area as shown.

Fig 6

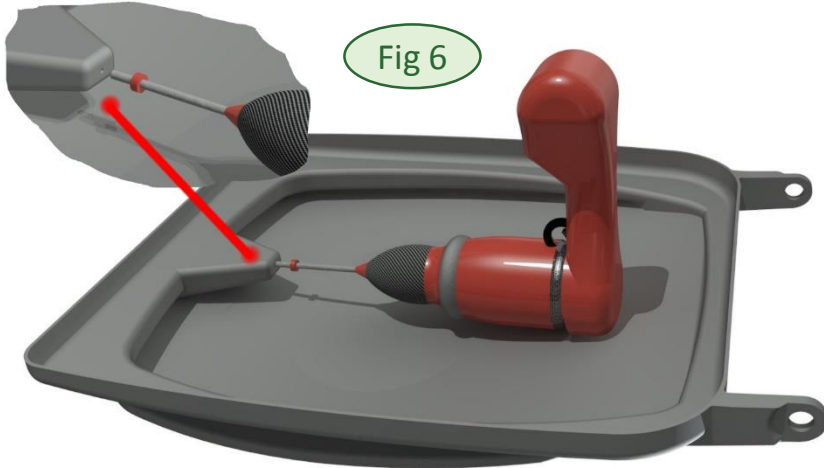


Fig. 6)

With the lid as in fig. 6, drill 11mm hole into the handle housing as shown. Indent is in lid as a guide for the drill.

Fig 7



Fig. 7)

Clean around the hole area and then insert rubber tube through the hole.

Fig 8

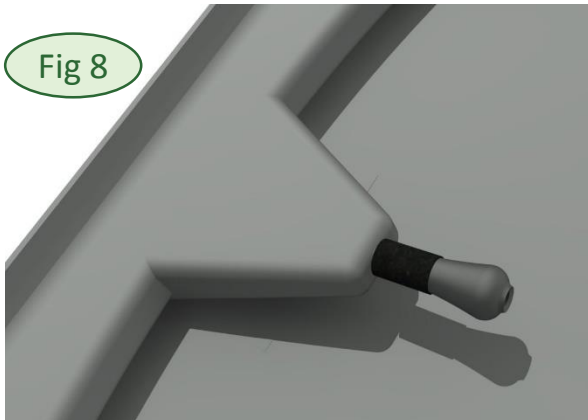


Fig. 8)

Stop when spacer is up against lid and should look like shown in fig. 8.

Fig 9



Fig. 9)

Tube is now laid in handle housing.

Fig 10



Fig. 10)

Slide the handle onto tube and then stretch tube outwards so the end is still visible as shown.

Fig 11

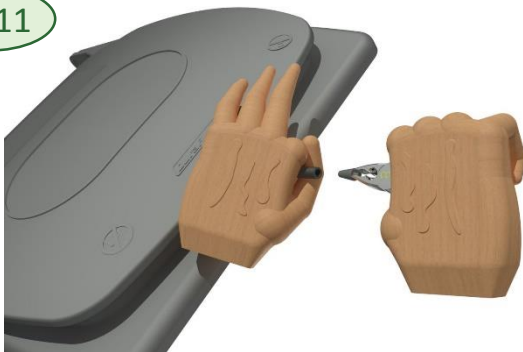


Fig. 11)

Repeat steps 1 to 4 (shown in fig. 1 to 4) to fit bung into tube.

Fig 12



Fig 13



Fig. 12 & 13)

When bung fully inserted release the tube carefully back into the handle (fig. 12) and the handle should sit into housing as shown in fig. 13.

Operating the retaining handle on a 240 litre bin



Fig. 14 & 15): Pull the handle slowly towards you as in fig. 14 & 15.



Fig. 16 & 17): And travel down towards the lifting comb of bin.



Fig. 18): The handle will hook under the comb and secure the lid in position.

Fig. 19): Under no circumstances overfill the bin as it will not be emptied.

Please feel free to contact us if you have any questions & need assistance:

> By telephone:

+44 (0)1246 853696

> By email to our Sales team:

enq@duraflexlids.co.uk

> By email to our Engineers dep.:

mick@duraflexlids.co.uk